



## **INSTALLATION INSTRUCTIONS**

### **TURBOCHARGER SYSTEMS:**

**2003 / 2004 Nissan 350Z**

**VQ35 3.5L V6 Engine, Manual Transmission Only**

**P/N 15134 (No Catalytic Converter)**

**P/N 15136 (With Catalytic Converter)**

**P/N 15138 (No Cat, Fuel or ECU Upgrade)**





**READ THIS FIRST:** Study these instructions completely before proceeding. Engine and/or turbocharger damage may occur if any component within these instructions is improperly installed. Turbonetics, Inc or any of its distributors cannot be held responsible for damages as a result of negligent or improper installation. This complete turbocharger system can be installed using common tools and automotive procedures, but installer must have a thorough knowledge of automotive engine operation and feel comfortable working on the vehicle. If in doubt, contact Turbonetics' technical support staff at 805-581-0333, between the hours of 8:00AM and 5:00PM PST, Monday through Friday.

Remove the turbocharger system from its carton and inspect for any obvious physical damage. All kit components are thoroughly inspected and carefully packaged prior to shipment from the factory. If any shipping damage is evident, contact your supplier and request that they process a claim with the shipper involved. Be sure to review the parts list on page 3 to verify that you have all necessary system components to proceed. If any components in the parts list are missing, contact Turbonetics' customer service staff.

Although this turbocharger system has been designed to use many of the factory emissions controls (P/N 15136 includes a replacement catalytic converter), it is not currently "smog" legal in California, and therefore recommended for "off road" use only. In other states, check local laws regarding aftermarket modification to emission controlled vehicles.

This Turbonetics' turbocharger system is available in 3 combinations. P/N 15134 and 15136 are intended for the typical enthusiast, and include all necessary components and hardware to simply "bolt on" the turbo system and drive. Both of these systems are identical except for 1 exhaust tube (which does or doesn't contain an aftermarket catalytic converter). P/N 15138 is intended for the "tuner" enthusiast who wants the freedom to choose his own fuel components and controls, and includes all the same components and hardware as P/N 15134, except NO fuel injectors, fuel pump or ECU upgrade.

The information contained in this publication was accurate and in effect at the time the publication was approved for printing and is subject to change without notice or liability. Turbonetics reserves the right to revise the information presented herein or to discontinue the production of parts described at any time.

**SAFETY REQUIREMENTS:** It is recommended to follow these precautions.

- Always wear safety glasses & gloves.
- Turn the ignition switch to the OFF position & disconnect the battery.
- Always use properly rated jack stands when working under the vehicle.
- Prevent unexpected vehicle movement by using wheel chocks and/or parking brake.
- Operate the vehicle only in well ventilated areas.
- Do not smoke or use flammable items near or around the vehicle's fuel system.
- Keep hands, clothing and other objects away from moving parts when engine is running.

**SUPPLIES:** It is recommended to have the following items before beginning installation.

- Nissan factory service manual, for your model year 350Z
- A large table or bench, and plenty of adjacent available workspace
- Standard selection of automotive tools, primarily metric sizes
- An assortment of "zip ties" and/or thin-gauge steel wire
- The ability to securely lift the vehicle at least a few feet off the ground
- High temp. automotive RTV sealant
- NPT thread sealant
- Replacement engine oil, oil filter, and power steering fluid
- 7/64" and 3/8" drill bits
- Step drill, 1/8" – 9/16" range



**TORQUE RECOMMENDATION:** When removing and re-installing factory fasteners, refer to the Nissan service manual for torque values. When installing fasteners included in this kit, refer to the following chart:

| Fastener Size | Torque (Pound-Feet)         | Torque (Newton-Meters) |
|---------------|-----------------------------|------------------------|
| 1/4" or 6mm   | 10                          | 13                     |
| 5/16" or 8mm  | 19                          | 25                     |
| 3/8" or 10mm  | 33                          | 45                     |
| NPT fittings  | 2-3 turns past finger tight |                        |

**TURBOCHARGER SYSTEM PARTS LIST:**

| QTY | P/N   | DESCRIPTION                               | P/N 15134 | P/N 15136 | P/N 15138 |
|-----|-------|---|-----------|-----------|-----------|
| 1   | 11096 | Turbocharger, 60-1 / Stg.5 / Ball Bearing | X         | X         | X         |
| 1   | 5-312 | Air to Air Intercooler, Spearco           | X         | X         | X         |
| 1   | 10781 | Wastegate, Evolution                      | X         | X         | X         |
| 1   | 10843 | Blow-off Valve, Raptor                    | X         | X         | X         |
| 1   | 11097 | Hardware Kit, Hoses / Clamps              | X         | X         | X         |
| 1   | 11098 | Hardware Kit, Nuts / Bolts / Fittings     | X         | X         | X         |
| 1   | 11099 | Hardware Kit, Gaskets / Misc.             | X         | X         | X         |
| 1   | 11100 | Hardware Kit, Fuel Components             | X         | X         |           |
| 1   | 11103 | ECU Return Box Kit                        | X         | X         |           |
| 1   | 21175 | Tube, Turbocharger to Intercooler         | X         | X         | X         |
| 1   | 21176 | Tube, Intercooler to MAF Sensor – 1       | X         | X         | X         |
| 1   | 21177 | Tube, Intercooler to MAF Sensor – 2       | X         | X         | X         |
| 1   | 21178 | Tube, Intercooler to MAF Sensor – 3       | X         | X         | X         |
| 1   | 21179 | Tube, MAF Sensor to Throttle Body         | X         | X         | X         |
| 1   | 21180 | Tube, Air filter to Turbocharger          | X         | X         | X         |
| 1   | 21181 | Tube, Exhaust, Crossover                  | X         | X         | X         |
| 1   | 21182 | Tube, Exhaust, U-bend                     | X         | X         | X         |
| 1   | 21183 | Tube, Exhaust, Y-pipe                     | X         | X         | X         |
| 1   | 21184 | Tube, Exhaust, Turbine Hsg. Inlet         | X         | X         | X         |
| 1   | 21185 | Tube, Exhaust, Downpipe – 1               | X         | X         | X         |
| 1   | 21186 | Tube, Exhaust, Downpipe – 2               | X         | X         | X         |
| 1   | 21200 | Tube, Exhaust, Wastegate Discharge        | X         | X         | X         |
| 1   | 21204 | Tube, Exhaust, Downpipe – 3 (No Cat.)     | X         |           | X         |
| 1   | 21201 | Tube, Exhaust, Downpipe – 3 (With Cat.)   |           | X         |           |
| 1   | 21213 | Tube Assembly, Replacement A/C line       | X         | X         | X         |
| 1   | 30223 | Heat Shield, Tangential T4 housing        | X         | X         | X         |
| 1   | 21205 | Support Bracket, Downpipe - 3             | X         | X         | X         |
| 1   | 31080 | Air Filter, AEM Dry-Flo, 3.0" Inlet       | X         | X         | X         |
| 1   | 60130 | Install Instructions                      | X         | X         | X         |



| QTY | P/N | DESCRIPTION |
|-----|-----|-------------|
|-----|-----|-------------|

| QTY | P/N | DESCRIPTION |
|-----|-----|-------------|
|-----|-----|-------------|

**HARDWARE KIT# 11097 (HOSES / CLAMPS) PARTS LIST:**

|      |          |                              |
|------|----------|------------------------------|
| 3 FT | 10721    | Oil Supply Hose, -3 Fittings |
| 3    | 30162-4  | Silicone Hose Coupling, 3.0" |
| 2    | 30172-4  | Silicone Hose Coupling, 2.5" |
| 2    | 30380-4  | Silicone Hump Connect, 2.5"  |
| 1    | 30444-4  | Silicone 45' Elbow, 2.5"     |
| 6 FT | 30542-BK | Silicon Vacuum Hose, 5/32"   |

|      |           |                         |
|------|-----------|-------------------------|
| 10   | 30275-250 | T-bolt Band Clamp, 2.5" |
| 6    | 30275-300 | T-bolt Band Clamp, 3.0" |
| 3    | 31073     | V-band Clamp            |
| 2    | 30232     | V-band Clamp            |
| 4    | 30817     | Hose Clamp, 5/8"        |
| 7 FT | 30827     | Hose, Oil Drain, 5/8"   |

**HARDWARE KIT# 11098 (NUTS / BOLTS / FITTINGS) PARTS LIST:**

|   |       |  |
|---|-------|--|
| 1 | 30133 | Fitting, 3/8" NPT x 5/8" Hose, Straight  |
| 2 | 30306 | Fitting, 1/8" NPT x 5/32" Hose, Straight |
| 1 | 30307 | Fitting, 1/8" NPT x 5/32" Hose, Elbow    |
| 1 | 30544 | Fitting, 1/8" NPT x -3, Straight         |
| 1 | 30551 | Fitting, 1/8" NPT x -3, Elbow            |
| 1 | 30562 | Fitting, 1/8" NPT, M x M x F             |
| 1 | 30816 | Fitting, 1/2" NPT x 5/8" Hose, 45'       |
| 2 | 30566 | Hex Bolt, 1/4 -20 x 1/2" Lg.             |
| 4 | 30567 | Hex Bolt, 1/4 -20 x 3/4" Lg.             |
| 2 | 30570 | Hex Bolt, 5/16 -18 x 1.0" Lg.            |
| 2 | 30739 | Hex Bolt, M8-1.25 x 25mm Lg.             |
| 2 | 30700 | Hex Bolt, M8-1.25 x 20mm Lg.             |
| 2 | 30248 | Hex Bolt, 1/4-20 x 5/8" Lg.              |

|    |       |                                      |
|----|-------|--------------------------------------|
| 6  | 31003 | Hex Bolt, M10-1.25 x 40mm Lg.        |
| 4  | 31005 | Hex Bolt, M10-1.50 x 20mm Lg.        |
| 6  | 30589 | Flat Washer, 5/16" or M8             |
| 6  | 30804 | Flat Washer, M10                     |
| 4  | 30591 | Flat Washer, 1/4" or M6              |
| 10 | 30593 | Lock Washer, 5/16" or M8             |
| 14 | 30805 | Lock Washer, M10                     |
| 6  | 30596 | Lock Washer, 1/4" or M6              |
| 4  | 30578 | Hex Nut, 1/4-20                      |
| 6  | 30653 | Hex Nut, M8                          |
| 10 | 30803 | Hex Nut, M10-1.25                    |
| 3  | 30806 | Stud, M10-1.25 x 42mm Lg.            |
| 4  | 30860 | Stud, M8-1.25 x 30mm Lg.             |
| 3  | 30862 | Hex Plug for O2 Bung, M18-1.5        |
| 1  | 31004 | Socket Hd. Bolt, M10-1.25 x 50mm Lg. |

**HARDWARE KIT# 11099 (GASKETS / MISC.) PARTS LIST:**

|   |        |                                  |
|---|--------|----------------------------------|
| 2 | 20142  | Gasket, W'gate Disch., Evolution |
| 1 | 20259  | Flange, Oil Drain, 1/2" NPT      |
| 1 | 20732P | Disch. Horn, Raptor              |
| 1 | 21202  | Support Bracket, Turbo           |
| 2 | 21203  | Mounting Bracket, Intercooler    |
| 1 | 30141  | Gasket, Oil Drain, T3/T4         |
| 1 | 30263  | Gasket, Turbine Inlet, T3        |

|        |       |                                  |
|--------|-------|----------------------------------|
| 1      | 30468 | O-ring, Flange, Raptor           |
| 1      | 30808 | Tap, 1/8" NPT                    |
| 1      | 30809 | Tap, 3/8" NPT                    |
| 1      | 31006 | Loop Strap, 1.0" dia., 1/4" hole |
| 7.5 FT | 31007 | Heat Shield Wrap, 1.5" Wide      |

**HARDWARE KIT# 11100 (FUEL COMP'TS) PARTS LIST:**

|   |       |                        |
|---|-------|------------------------|
| 6 | 21210 | Spacer, Fuel Injector  |
| 6 | 21211 | Adapter, Fuel Injector |

|   |       |                        |
|---|-------|------------------------|
| 6 | 31001 | Fuel Injector, Upgrade |
| 1 | 31002 | Fuel Pump, Upgrade     |

**ECU RETURN BOX KIT# 11103 PARTS LIST:**

|   |       |                      |
|---|-------|----------------------|
| 1 | 31009 | ECU Return Box       |
| 1 | 31011 | Pair of Foam Inserts |
| 1 | 31038 | Fedex Return Label   |

|   |       |                             |
|---|-------|-----------------------------|
| 1 | 31039 | Serial No. Decal, White     |
| 1 | 31043 | Electronic Mat'l Decal, Red |



P/N 11096



P/N 5-312



P/N 10781



P/N 10843



P/N 11097



P/N 11098



P/N 11099



P/N 11100



P/N 21175



P/N 21176



P/N 21177



P/N 21178





P/N 21179



P/N 21180



P/N 21181



P/N 21182



P/N 21183



P/N 21184



P/N 21185



P/N 21186



P/N 21200



P/N 21204



P/N 21201



P/N 21213





P/N 30223



P/N 21205



P/N 31080



P/N 11103



P/N 60130





THIS PAGE LEFT BLANK INTENTIONALLY



**PREREQUISITE STEPS:** Before getting your hands dirty while under the hood, there are 2 prerequisite steps. See the following 2 sections for detailed instructions regarding A/C Tube Replacement and ECU Removal & Shipping.

**A/C TUBE REPLACEMENT:** The first prerequisite step is to have a replacement air conditioning tube assembly (included in the kit) installed by a professional A/C technician. This is necessary because the turbocharger is located very close to this A/C tube in its factory location, so a replacement “shielded” tube assembly is supplied to move it away from the hot turbocharger. **HAZARDOUS:** Do not attempt to perform this step without proper training or equipment. Take your car to a local auto repair shop that is capable of discharging and recharging the A/C system on your car, and have them perform the following 8 steps. Don't forget to bring the replacement part, P/N 21213 (FIGURE 1).

1. Turn the ignition switch to the OFF position & disconnect the battery.
2. Using factory recommended procedures, evacuate (discharge) the A/C system.
3. Remove factory air filter box assembly (FIGURE 2), to provide easy access to the A/C tube being replaced.

FIGURE 1



FIGURE 2



4. Remove factory A/C tube, as shown in FIGURES 3 and 4. Tube routes from the A/C compressor (front, driver's side of engine) on one end, towards the front-mount heat exchanger on the other end.

FIGURE 3

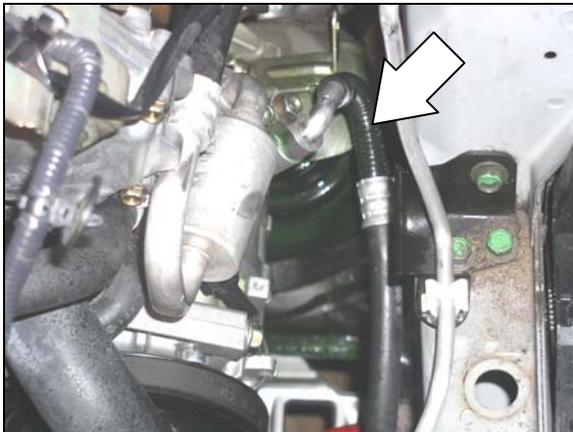



FIGURE 4





5. Install replacement A/C tube assembly (P/N 21213) in same location. See FIGURE 5.

FIGURE 5

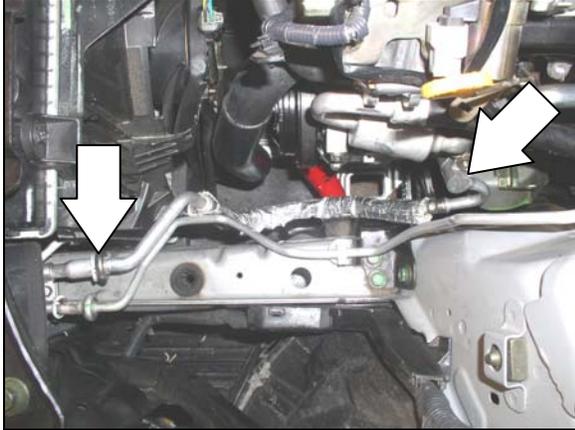

6. Using factory recommended procedures, re-fill (charge) the A/C system. Check for leaks.
7. Re-install the factory air filter box assembly, and reconnect the battery.
8. Start the car, turn on the A/C system & re-check for leaks.

**ECU REMOVAL & SHIPPING:** Once the A/C tube is replaced and working properly, the 2nd prerequisite step is to remove the ECU (Engine Control Unit) from the car, and ship it to Turbonetics to load the new engine management program, tuned specifically for your car with this turbo setup.

**NOTE 1:** You'll want to perform this step just before you are ready to start working on the car. When you receive your ECU back from Turbonetics, it will be re-programmed for a turbocharged engine and therefore will no longer work properly with your naturally aspirated "stock" engine. The included ECU return box kit (P/N 11103) includes a pre-paid Fedex shipping label for express shipping, so you can expect to receive your ECU back in 2-3 days.

**NOTE 2:** If, in the future, you choose to remove the turbocharger system (for example, before selling the car), it is possible to re-program your ECU back to naturally aspirated "stock" specs. At that time, contact Turbonetics' customer service staff for details.


9. Turn the ignition switch to the OFF position & disconnect the battery.
10. Remove the ECU, located behind the passenger-side lower dashboard. Refer to the Nissan service manual for more detailed instructions, but listed below is a general guideline on how to do this:
  - Remove passenger-side cup holder, by releasing the retainer clip (that keeps the assembly from coming completely out of the dashboard) with a flat head screwdriver (SEE FIGURE 6).
  - Remove fasteners the hold the lower dashboard in place.
  - Locate the ECU and remove the electrical connectors & fasteners holding it in place (SEE FIGURE 7).



FIGURE 6



FIGURE 7

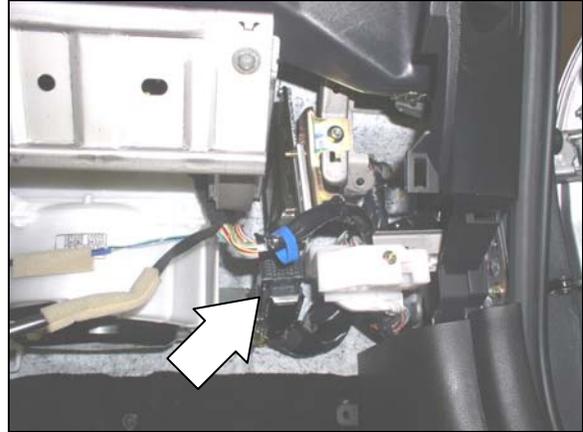

11. Once removed from the car, attach the Serial No. decal (P/N 31039) to the ECU in the location pointed out in FIGURE 8, and fill out the information on the label with a permanent black pen or thin-tip marker. **NOTE: All ECU's received with incomplete or illegible decals will be returned or discarded, so please print clearly and completely!**

- First & Last Name (Who are you?)
- Mailing Address (Where should we ship your ECU back to you?)
- Phone Number (How can we contact you, if any problems arise?)
- Model Year / Manufacturer Name / Model Name (For example: 2003 Nissan 350Z Touring)
- Manufacture date of car (Located on driver side door jam; See FIGURE 9)
- Transmission Type (Manual or Automatic)
- V.I.N. number (Also located on driver side door jam; See FIGURE 9)

FIGURE 8



FIGURE 9



12. Package your ECU in the return box (P/N 31009), using the supplied foam packaging inserts (P/N 31011). Fill in your address on the Fedex return label (P/N 31038), and apply it to the outside of the box. Seal the box closed with the supplied Electronic Mat'l decal (P/N 31043).

13. Logon to [www.Fedex.com](http://www.Fedex.com) or [www.Kinkos.com](http://www.Kinkos.com) to find the nearest Fedex package drop-off location, and ship your ECU return box to Turbonetics.



THIS PAGE LEFT BLANK INTENTIONALLY



**TIME TO GET YOUR HANDS DIRTY:** With the prerequisite steps done, and the car parked for a few days (without an ECU), its time to start working under the hood. The steps from this point forward will progress smoother if you are prepared with the supplies listed on page 2, and although not necessary, the ability to lift the vehicle more than a few feet (i.e. a hydraulic lift) will make installation a lot easier. **NOTE:** The following steps dictating removal of factory parts are purposely generic; refer to the Nissan factory service manual for more detailed instructions and torque specs for all fasteners.

14. Remove the factory fuel pump assembly.

- A. Remove the plastic cover from inside the passenger side storage space (SEE FIGURE 10).
- B. Remove metal access cover and temporarily push off to the side (SEE FIGURE 11).

FIGURE 10



FIGURE 11




- C. Remove 6 hex bolts, disconnect the electrical connection & fuel connection from the top of the pump assembly. **NOTE:** Now would be a good time to extinguish your cigarette & remove any other flammable items from the area.
- D. Carefully pull out the fuel pump assembly (SEE FIGURE 12), and cover the exposed gas tank.

FIGURE 12



FIGURE 13

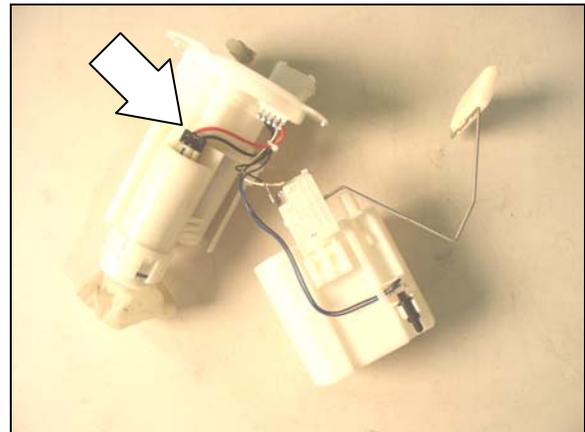

15. Sit down at a large open table, and prepare to disassemble the fuel pump assembly, per the following steps: (You will need a small flathead screwdriver, needle nose pliers, 7/64 and 3/8" drill bits and metal / wire cutters)



- A. Release the plastic clip that holds the 2 halves of the spring-loaded assembly together. Be careful not to stress or break any of the electrical wires. Set aside the coil springs. Unclip and release the electrical connector pointed out in FIGURE 13.
- B. Remove the plastic retainer clip (pointed out in FIGURE 14), black rubber damper, and fuel pump from the top half of the pump assembly.

FIGURE 14

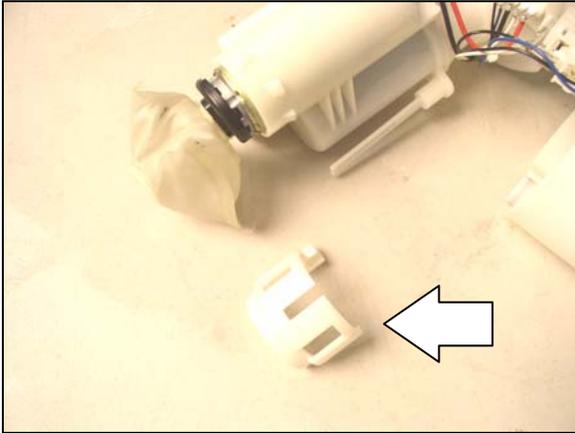


FIGURE 15



- C. Remove the filter bag by releasing the metal retaining ring from the bottom of the fuel pump (pointed out in FIGURE 16).
- D. Break off the small plastic tabs on the topside of the new fuel pump (P/N 31002) as shown in FIGURE 17. This is necessary because the new fuel pump is slightly taller than the factory pump, and these tabs keep it from installing properly.

FIGURE 16

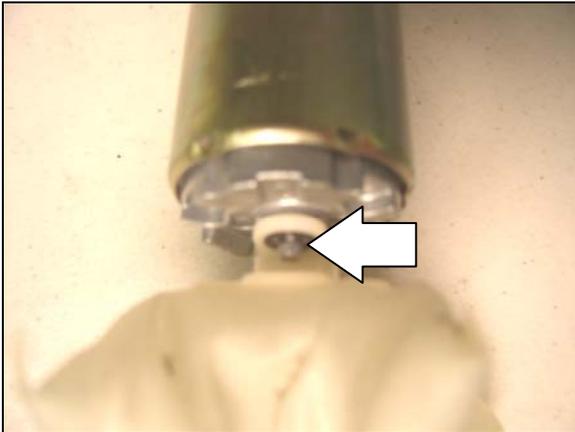


FIGURE 17



- E. Install the filter bag and metal retaining ring on the new fuel pump in the same location.
- F. Remove the rubber seal (pointed out in FIGURE 18) from the factory pump and install on the new pump in the same location.
- G. Install the new pump into the fuel pump assembly by reversing the previous few steps.
- H. Remove the factory fuel pressure regulator by removing the plastic retainer clip pointed out in FIGURE 19, and prying the regulator out with a small flathead screwdriver.
- I. Carefully hold the regulator in a bench vice (or similar) and drill out the bottom orifice using a 7/64" drill bit, only until the drill breaks through the first thickness of sheetmetal (about 1/16" deep) SEE FIGURE 20. This step is necessary because the orifice size restricts the flow capacity of the upgraded fuel pump.



Deburr the hole, and thoroughly clean out any remaining metal chips. **NOTE:** Take special care during this step, as this regulator is not available (as a replacement part) from your local Nissan dealership. If you destroy this part, the dealership will only sell you the whole pump assembly!

FIGURE 18


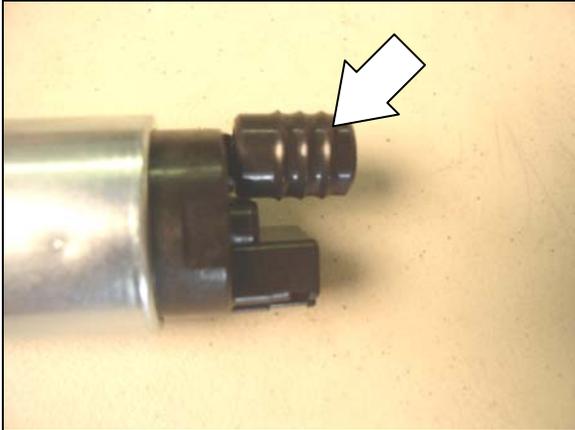


FIGURE 19

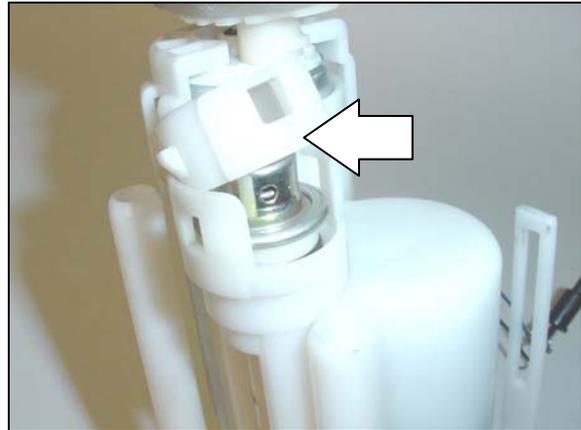


- J. Remove & discard the yellow plastic fuel nozzle pointed out in FIGURE 21. Again, this step is necessary because the orifice size in this nozzle restricts the flow capacity of the upgraded fuel pump.
- K. Carefully hold the bottom half of the white plastic fuel pump housing in a bench vice (or similar) and drill (2) 3/8" diameter holes in the side of the housing, as shown in FIGURE 21. Location is not critical, as long as the holes are near the bottom edge of the housing.
- L. Re-assemble the fuel pump assembly by reversing the previous steps.

FIGURE 20



FIGURE 21

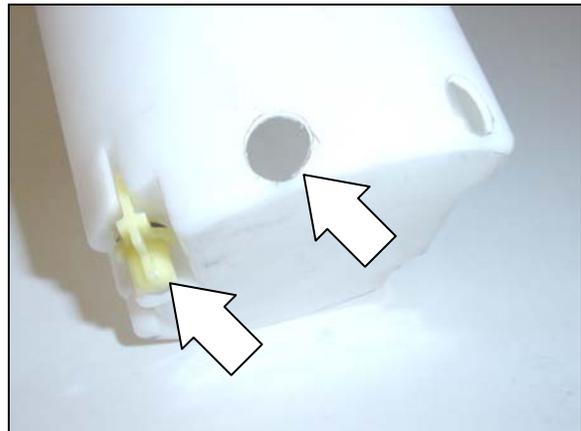

- 16. Re-install the factory fuel pump assembly into the car, by reversing step 14.
- 17. Remove the strut tower brace.
- 18. Remove factory air filter box assembly and intake tube (FIGURE 2).
- 19. Remove plastic intake cover (with the Nissan logo).
- 20. Remove top half of upper intake plenum (FIGURE 22).



21. Remove bottom half of upper intake plenum (FIGURE 23). **NOTE:** Once complete, plug the 6 intake runner holes with a shop rag, so that loose nut & bolts don't fall into the engine... You don't want to have to take the engine apart to retrieve lost parts!

FIGURE 22



FIGURE 23



22. Remove electrical connectors on all 6 fuel injectors, and push aside.
23. Remove the bolts holding down the fuel rail.
24. Pull up on each side of the fuel rail to pull the injectors out of the lower intake plenum (SEE FIGURE 24).
25. Remove the metal retainer clips holding the fuel injectors to the fuel rail (pointed out in FIGURE 24), and pull the injectors out of the fuel rail. **NOTE:** There will be some residual fuel in the rail, so be prepared to get wet.

FIGURE 24



FIGURE 25



26. Sit down at a large open table, layout the 6 factory injectors and the 6 new injectors (P/N 31001) next to each other, and perform the following:
- A. Remove the o-ring seals from the bottom of the factory injectors, and slide them onto the bottom of the new injectors.
  - B. Remove the o-ring seals and fuel-rail seals from the top of the new injectors.



- C. Install the injector adapters (Round aluminum part w/ 2 diameters; P/N 21211) onto the top of the new injectors with the larger diameter facing down towards the body of the injector (pointed out in FIGURE 25).
  - D. Remove the o-ring seals from the top of the factory injectors, and slide them onto the top of the new injectors, over the adapters. The finished injectors should look like the one pointed out in FIGURE 25.
27. With all o-ring seals transferred to the new injectors, you're almost ready to install the new injectors back into the car. Install the round injector spacers (P/N 21210) into the injector holes in the lower intake plenum, so that the new injectors will sit on top of them (pointed out in FIGURE 26).
28. Carefully install the new injectors into the fuel rail, facing the same direction as the factory injectors. You will not re-use the factory metal retainer clips.

FIGURE 26


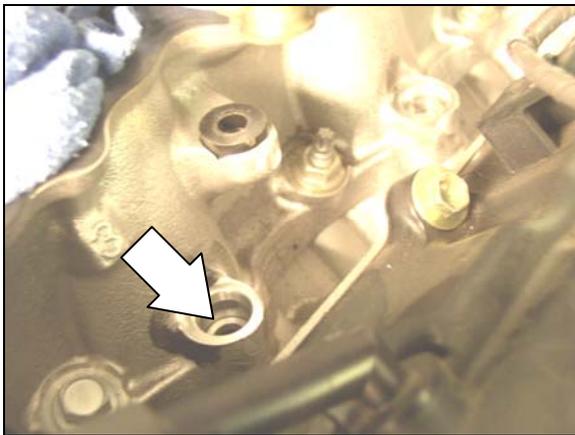


FIGURE 27

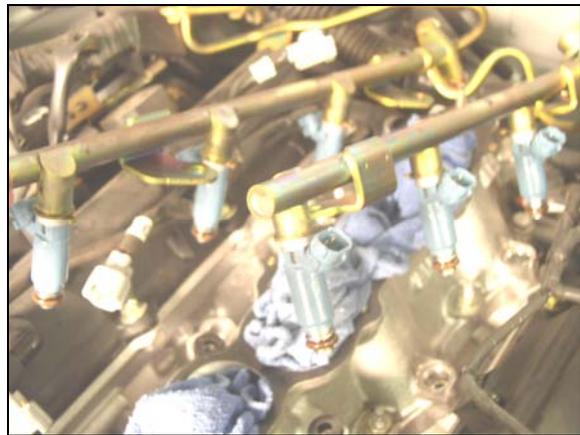

29. Re-install and bolt down both fuel rails, taking care while pressing each injector down into the lower intake plenum, to make sure each injector is properly seated on the injector spacers. Re-connect the electrical connectors to the injectors.
30. Remove the factory valve cover breather hose (pointed out in FIGURE 28).
31. Cut a length of 5/8" I.D. rubber hose (P/N 30827) to 5-1/2 feet. Install this hose in place of the factory hose removed in the previous step, re-using factory hose clamps on both ends. Temporarily route the hose towards the front drivers side of the car until later in the instructions.
32. Remove the driver's side exhaust manifold heat shield (pointed out in FIGURE 29). This is easier to accomplish from the topside of the engine.



FIGURE 28


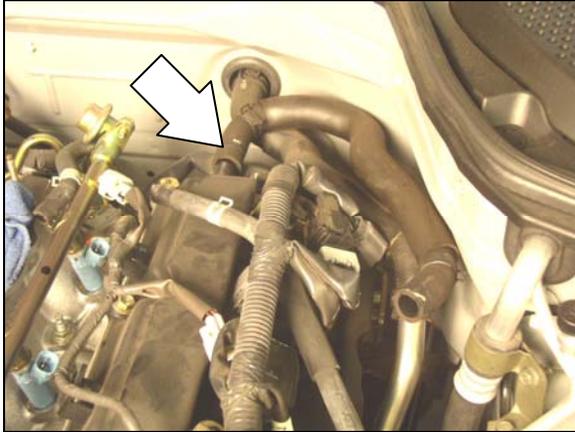


FIGURE 29

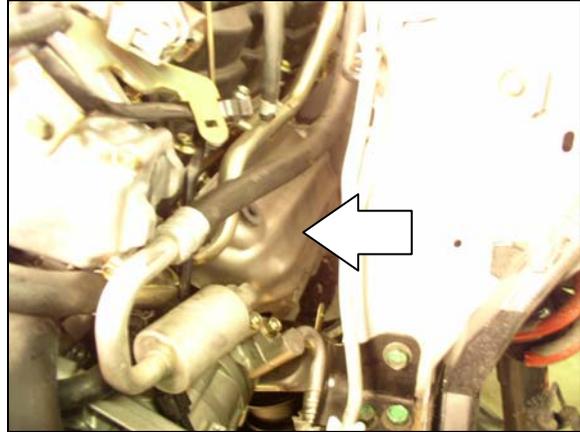


33. Re-install both halves of the upper intake plenum, as well as any removed hoses, clamps or electrical connectors, reversing steps 20 & 21. Don't re-install the plastic intake cover or strut tower brace at this time.
34. Lift the front half of the car, and take all necessary safety precautions to secure the vehicle.
35. Remove the plastic splashguard from under the front bumper cover, the plastic inner fenders (in front of the wheels), the front bumper cover, styrofoam bumper pad, aluminum front bumper, and any remaining plastic fascia pieces (SEE FIGURES 30-32). Although not necessary, it is convenient to remove the front wheels.

FIGURE 30



FIGURE 31

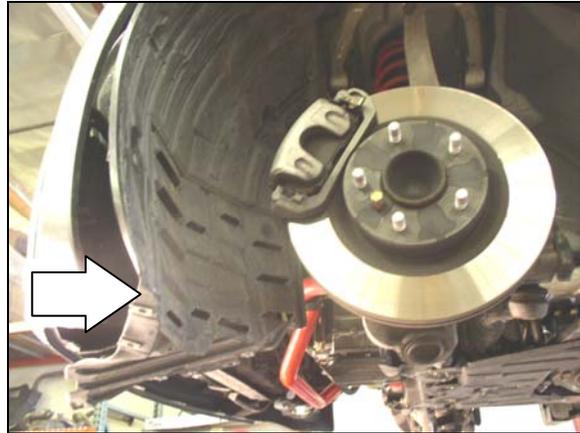

36. Relocate the power steering cooler to the passenger side inner fender well, per the following steps:
  - A. Remove power steering cooler complete with mounting brackets from its mounting position, and disconnect the rubber hose connection (pointed out in FIGURE 31). **NOTE:** Be prepared with a drain pan to catch the used power steering fluid.



FIGURE 32


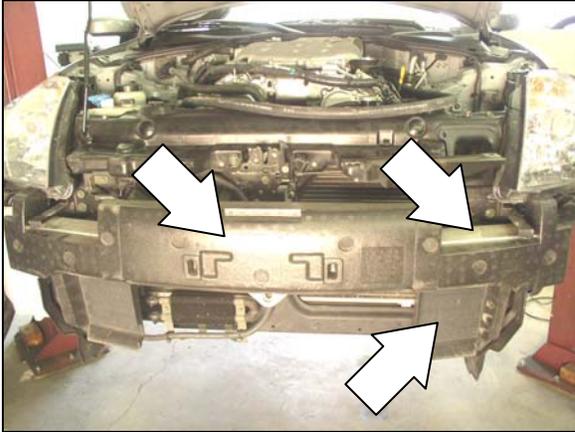


FIGURE 33

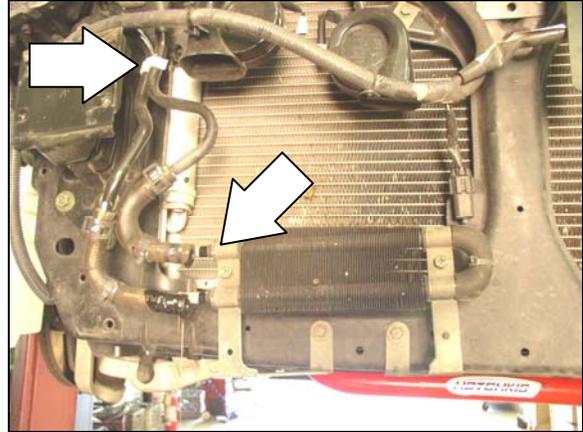

- B. Remove all metal tubing and rubber hoses, all the way back to the hose connection under the power steering fluid reservoir, in the passenger side inner fender well (circled in FIGURE 34).
- C. Remove both mounting brackets from the cooler, and re-mount the “left” bracket (pointed out in FIGURE 33) to the “right” side of the cooler, rotated 180 degrees from its original orientation. Look closely at FIGURE 36 to see the orientation of the bracket (pointed out by the arrows).
- D. Mount the cooler (with rotated bracket) inside the passenger side fender well (as shown in FIGURE 35 & 36) re-using the factory mounting hardware removed in step A. Re-use one of the factory tapped holes to fasten the bracket to the fender well sheet metal.
- E. Re-connect the rubber hoses (circled in FIGURE 34) to the cooler, using factory hose clamps. **NOTE:** It may be necessary to cut an inch or two off the length of one of the hoses; use best judgment.

FIGURE 34

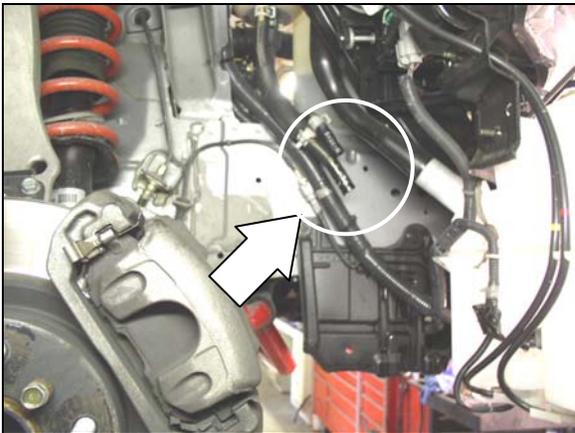


FIGURE 35

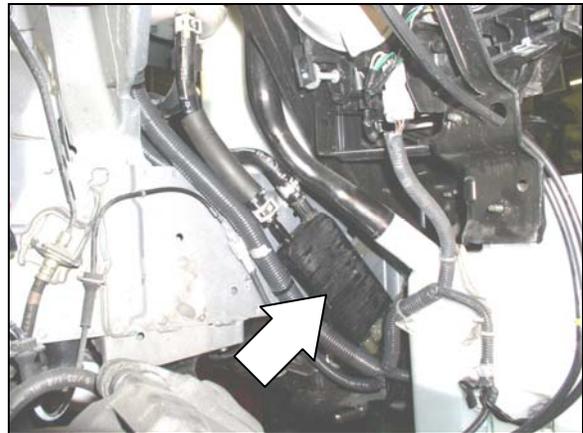




FIGURE 36


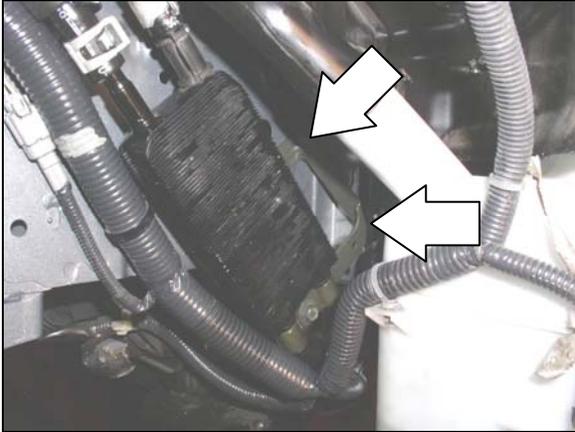


FIGURE 37

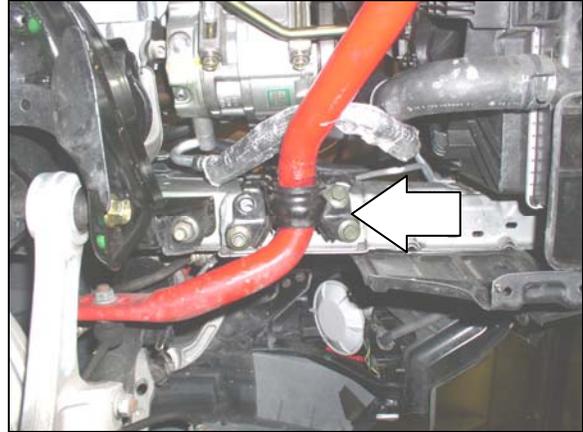

37. Remove front sway bar mounting brackets (shown in FIGURE 37) connected to the frame rail, so that the sway bar dangles loosely under the car. This step is optional, but makes the next few steps easier.
38. Drain the engine oil, and remove the oil pan.
39. Using a center punch, mark and score the location of the oil drain. Hole should be centrally located between the cast ribs of the engine block as shown in FIGURE 38 & 39.
40. Using a step drill or 1/8" drill bit, drill a pilot hole into the engine block. Increase drill bit sizes in small increments up to 9/16" hole. **NOTE:** Be careful not to push too hard when drilling, so as to avoid hitting any internal engine components when the drill bit breaks thru the casting (use of a step drill will help prevent this from happening).
41. Carefully thread the hole using the supplied 3/8" NPT tap. The tap only needs to go into the casting far enough to create full threads (approx. 3/8"), no further. **NOTE:** It is recommended to hand turn the tap, to avoid cross threading. This is a critical process... you don't want to cross thread the engine block!

FIGURE 38

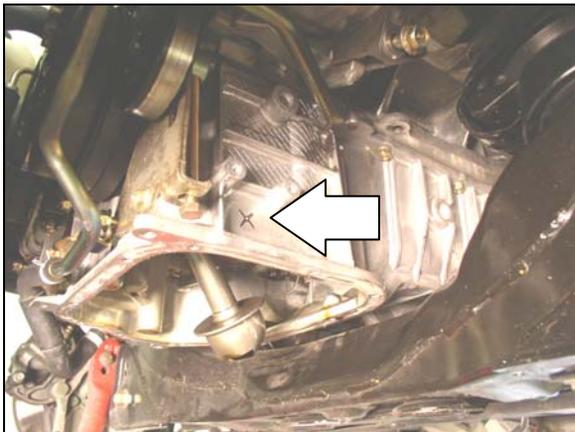


FIGURE 39



42. Deburr hole and thoroughly clean out any metal chips from inside of engine block. Install the 3/8" NPT x 5/8" hose barb fitting (P/N 30133), using NPT thread sealant.



43. Scrape off the excess factory sealant. Apply a new bead of high temp. RTV sealant to the oil pan sealing surface, and re-install the oil pan.
44. Remove the factory exhaust system (SEE FIGURE 38) from the 3-bolt manifold-to-CAT flange back to the 2-bolt flange (just before the first muffler).
45. Cut a length of heat shield wrap (P/N 31007) to 5.0 feet. Wrap P/N 21184 (Exh. Tube Ass'y, Turb. Housing Inlet) as seen in FIGURE 41. The heat wrap is adhesive backed, so it should stay in place, but as an added measure you may want to secure the end with a zip tie or steel wire.

FIGURE 40

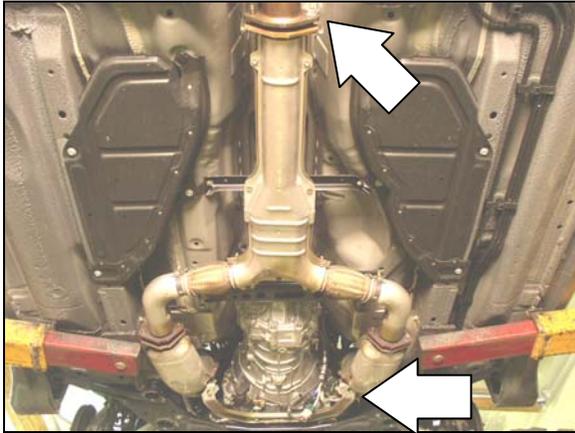


FIGURE 41



**NOTE:** During the next few steps, only loosely secure the new exhaust tubes in place. Once all exhaust tubes are loosely installed, go thru and tighten all the hardware & clamps.

46. Loosen the left factory hex bolt and remove the right hex bolt holding the A/C compressor in place (pointed out in FIGURE 42). Install P/N 21184 (Exh. Tube Ass'y, Turb. Housing Inlet) tube into position as shown in FIGURE 43, using the A/C bolts to loosely secure it in place.

FIGURE 42

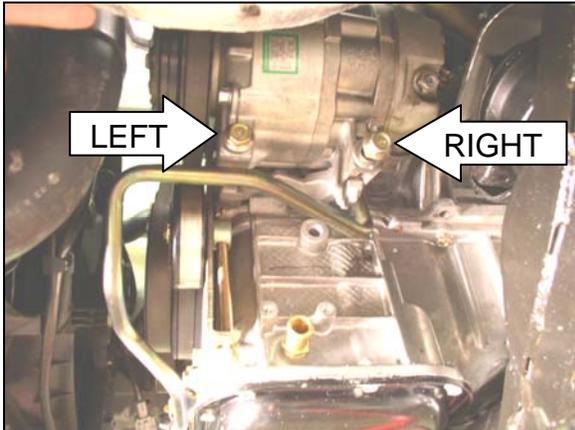



FIGURE 43



47. Either before or after loosely installing the "Turb. Housing Inlet" tube, install the "Turbo Support Bracket" (P/N 21202) circled in FIGURE 44, by loosening another of the A/C compressor bolts (on the driver's side top), and sliding the slotted end of the bracket under the loosened A/C bolt. The end of the bracket with the hole should line up with one of the holes in the turbocharger inlet flange (SEE FIGURE 44).



FIGURE 44

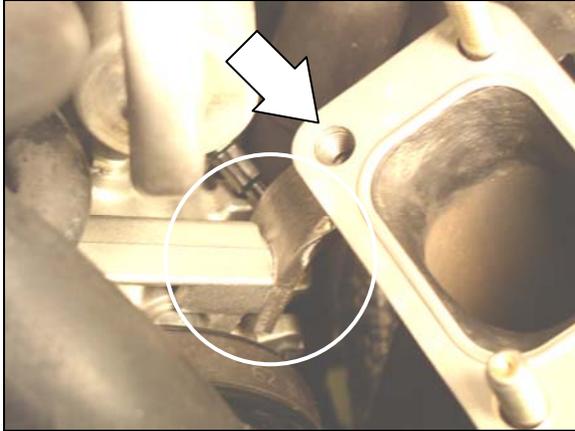

48. Install P/N 21183 (Exh. Tube Ass'y, Y-Pipe) into position shown in FIGURE 45, loosely securing it to the previous tube with v-band clamp P/N 31073.
49. Remove factory O2 sensor near the 3-bolt flange on the driver's side exhaust manifold, and install the O2 sensor plug (P/N 30862) in its place. The (2) factory O2 sensors can be disconnected and set aside for now. They will be re-installed later in the instructions.
50. Install P/N 21182 (Exh. Tube Ass'y, U-bend) into position shown in FIGURE 46, loosely securing it to the previous tube with v-band clamp P/N 31073. Attach & tighten the other end of the tube to the exhaust manifold, re-using one of the factory studs & nuts, and (2) M10 x 40mm hex bolts, lockwashers & nuts (Part Hardware Kit# 11098). Attach & tighten the O2 sensor (removed in the previous step) into the boss in this "U-bend" tube, circled in FIGURE 46. Recommend using anti-seize lubricant on this connection.

FIGURE 45

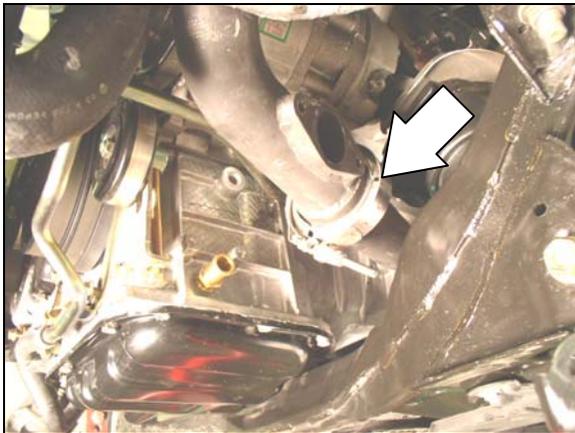


FIGURE 46



51. Install P/N 21186 (Exh. Tube Ass'y, Downpipe 2) into position shown in FIGURE 47, loosely holding it in position with steel wire, not fastened to anything. This is done now, because it is more difficult to install later in the instructions.
52. Install P/N 21181 (Exh. Tube Ass'y, Crossover) into position shown in FIGURE 48, loosely securing it to the "Y-pipe" tube with v-band clamp P/N 31073. Attach & tighten the other end of the tube to the exhaust



manifold, re-using one of the factory studs & nuts, and (2) M10 x 40mm hex bolts, lockwashers & nuts (P/Ns 31003, 30805, 30803).

FIGURE 47


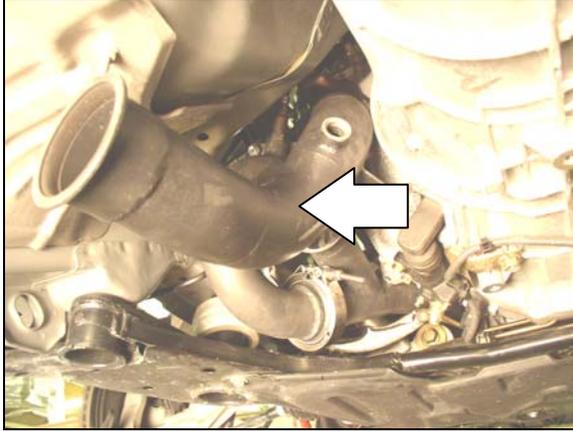


FIGURE 48

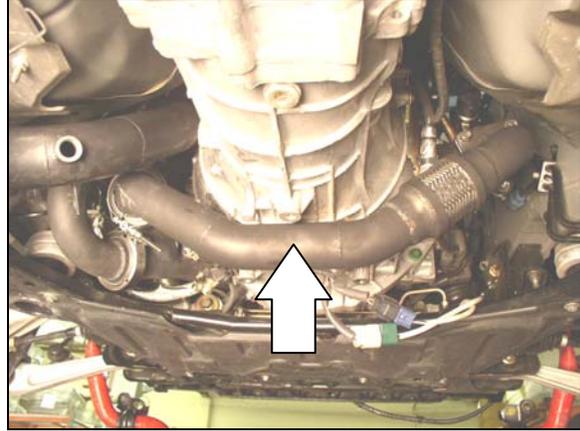

53. Using the supplied M8-1.25 bolts (P/N 31076), lock washers (P/N 30593), and flat washers (P/N 30589), secure the Evolution wastegate to the new turbo inlet pipe (P/N 21184 rev.B). SEE FIGURE 34 & 35

FIGURE 34

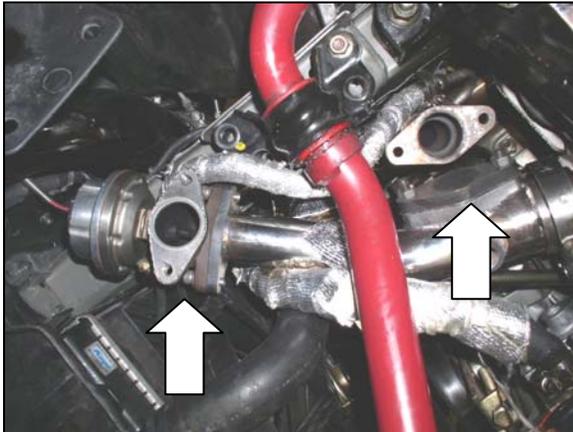


FIGURE 35



54. Block off the original wastegate mounting flange on the turbo inlet pipe (P/N 21184 rev.B) with the supplied block off plate (P/N 20251). Make sure there is a gasket (P/N 20142) between the flanges. Secure the block off flange to the pipe using existing hardware. SEE FIGURE 34 & 35

55. Mount the sway bar back onto the chassis and route the A/C line as shown in FIGURE 36.

56. Bolt one side of the new supplied wastegate dump tube (P/N 21427) to the to discharge side of the wastegate and bolt the other side to the original wastegate dump tube (P/N 21200) using the supplied M8-1.25 bolts (P/N 31076), lock washers (P/N 30593), and flat washers (P/N 30589) making sure there is a gasket (P/N 20142) in between each flange. SEE FIGURE 36, 37, 38



FIGURE 36

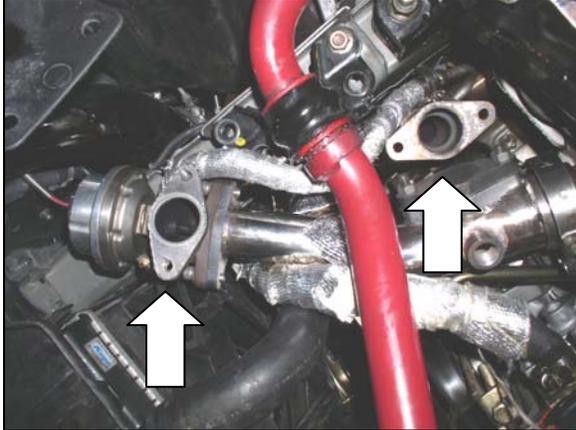


FIGURE 37



FIGURE 38



57. Lower the front half of the car.

58. In order to provide clearance for the turbocharger, it is necessary to bend 2 of the aluminum A/C tubes out of the way. Bend the silver-colored tubing (pointed out in FIGURE 49) and light-yellow-colored tubing (behind it & closer to engine) towards the engine as far as possible, as seen in the picture.

59. Remove dipstick and dipstick guide bracket (pointed out in FIGURE 50).



FIGURE 49


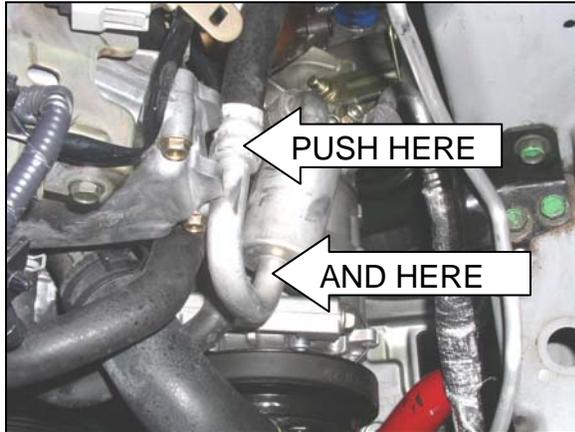


FIGURE 50

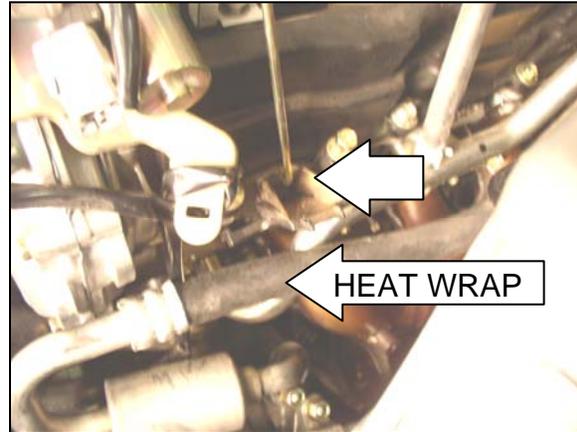

60. In order to protect the A/C line from burning, it is **critical** to wrap the A/C hose pointed out in FIGURE 50 with heat shield wrap (P/N 31007) as shown in FIGURE 51. If you have extra heat wrap, you may want to double-wrap this hose. Secure the open end with a zip tie or steel wire.
61. Install the loop strap (P/N 31006) around the A/C hose from the previous step, and secure it in the same place as the dipstick guide bracket, re-using the factory hex bolt. All this, to keep these parts shielded from the turbocharger heat.
62. Install (2) M8 x 30mm studs into the wastegate flange on P/N 21185 (Exh. Tube Ass'y, Downpipe 1). Install this tube into position shown in FIGURE 52, loosely securing it to the "Downpipe 2" tube with v-band clamp P/N 30232. While in the car, connect P/N 21200 (Exh. Tube Ass'y, W'gate Disch.) to it. Attach & tighten the 2 parts together at the wastegate flange with (1) wastegate gasket, and (2) M8 lockwashers & nuts (P/Ns 20142, 30593, 30653). **NOTE:** It is not possible to bolt these 2 parts together beforehand, it must be done on the car. The W'gate tube has the same flange on both ends, so the correct orientation will have the end with the bellows facing the ground. This tube is pointed out in FIGURE 53.

FIGURE 51


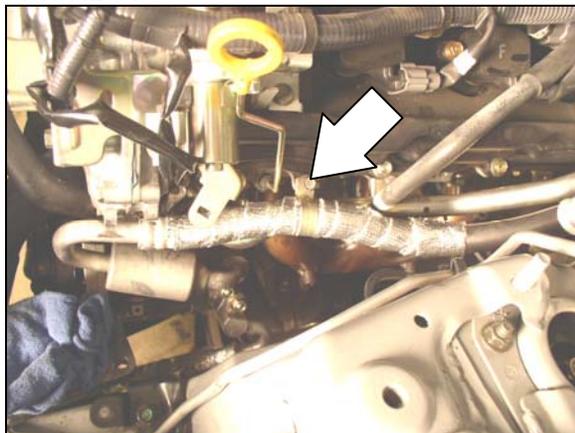


FIGURE 52



63. Install (3) M10 x 42mm studs and (1) turbine inlet gasket (P/Ns 30806, 30263) onto the turbine inlet flange as circled in FIGURE 53.
64. Place the turbocharger on a nearby open table, and install the following parts. Don't forget to use NPT thread sealant on all NPT fittings, and remove all protective covers and tags from the turbocharger.

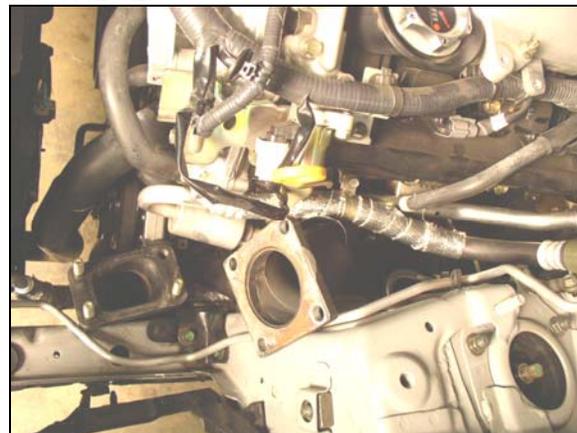

- (1) Oil drain gasket, and (1) Oil drain flange
- (1) 1/2" x 5/8" hose barb 45-degree fitting (Orient the fitting as shown in FIGURE 54)
- (2) M8 x 20mm hex bolts, lockwashers & nuts
- (1) 1/8" NPT x 5/32" 90-degree hose fitting (installed into the port on the compressor housing discharge, facing the same direction as the compressor discharge)

65. Cut a length of 5/8" I.D. rubber hose (P/N 30827) to 1-1/2 feet. Attach & tighten this hose to the oil drain fitting from the previous step, using (2) 5/8" hose clamps (P/N 30817), one clamp on each end of the hose.

FIGURE 53


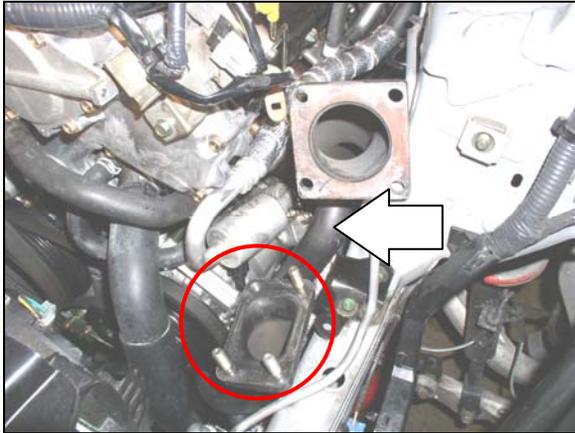


FIGURE 54

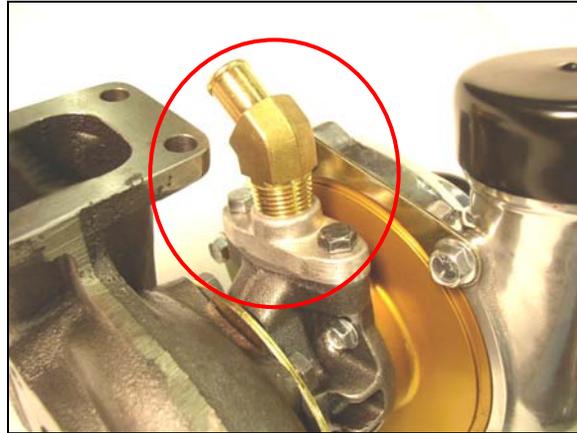

66. Bend the aluminum A/C tubing (pointed out in FIGURE 55) approx. 90 degrees downward over the frame rail as shown in the picture, just enough to provide adequate clearance for the turbocharger oil drain fitting. Temporarily install the turbocharger to check clearance, and bend more as needed.

67. Apply a bead of high temp. RTV sealant to the rectangular downpipe flange face, pointed out in FIGURE 55.

FIGURE 55

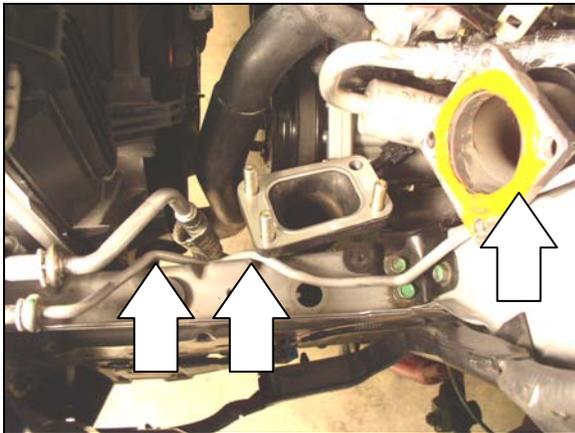


FIGURE 56



68. Attach & tighten the turbocharger to the turbine inlet flange, using (3) M10 flatwashers, lockwashers & nuts, and (1) M10 x 50mm socket head screw & flatwasher thru the 4<sup>th</sup> hole. This 4<sup>th</sup> fastener (pointed out in FIGURE 57) will go thru the turbine housing, turbine inlet flange & previously installed "turbo support bracket". Tighten it using (1) M10 lockwasher & nut on the underside of the support bracket, and also tighten the



factory (A/C compressor) hex bolt holding the “turbo support bracket”. Temporarily route the 5/8” oil drain hose down towards the fitting attached to the engine block.

69. Attach & tighten the “Downpipe 1” (pointed out in FIGURE 58) tube to the turbocharger turbine housing, using (4) M10-1.50 x 20mm hex bolts & lockwashers. Tighten the v-band clamp between the “Downpipe 1” and “Downpipe 2” tubes.

FIGURE 57


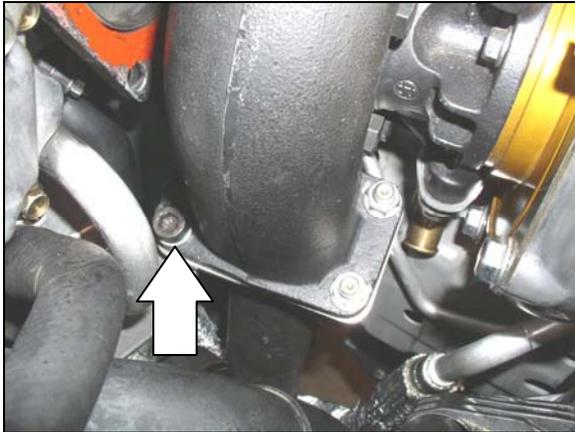


FIGURE 58

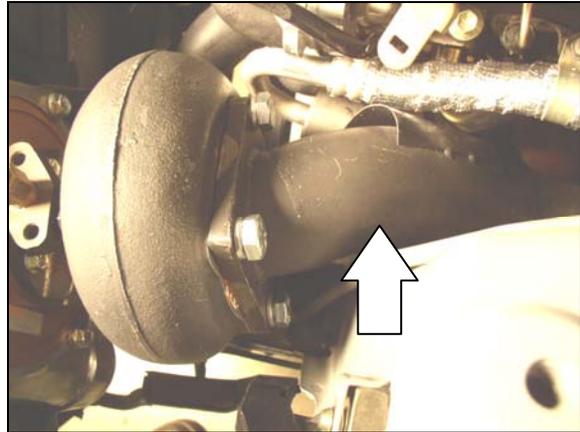

70. Install the 1/8” NPT x –3 90 degree oil fitting (P/N 30551) to the filter fitting atop the turbo center housing, using NPT thread sealant. Install the braided oil supply hose (P/N 10721) to that fitting, and temporarily route the hose down towards the bottom front of the engine.
71. Lift the front half of the car, and take all necessary safety precautions to secure the vehicle.
72. Install the third Downpipe (P/N 21201 or 21204, depending on which turbocharger system you purchased) using V-band clamp P/N 30232 to connect to the second downpipe, and (2) M10 x 40mm hex bolts, flatwashers, lockwashers & nuts to connect to the 2-bolt flange.
73. Install P/N 21205 (Support Bracket, Downpipe 3), using the 2 factory transmission bolts pointed out in FIGURE 61 on one end, and (2) M8 x 25mm hex bolts, lockwashers & nuts to connect to the bracket on the downpipe on the other end. Use M8 flatwashers on both sides of the bracket, total of (4).
74. Install (2) O2 sensor plugs (P/N 30862) into the welded bosses near the rear of the downpipe, pointed out in FIGURE 62. These bosses are for optional O2 sensors.



FIGURE 61

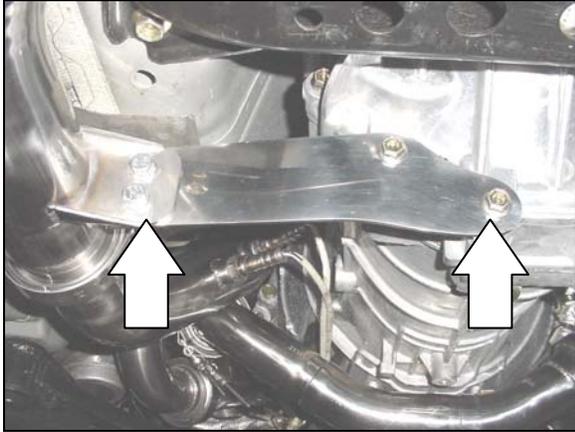


FIGURE 62




**NOTE:** Now that all exhaust tubes are loosely installed, go thru and tighten all the hardware & clamps.

75. Install the bottom half of the 5/8" oil drain hose to the oil drain fitting in the block, and secure with the attached hose clamp (pointed out in FIGURE 60). Cut the length of the hose to suit, so that no part of the hose is lower than the fitting in the block. Route the hose (downward from the turbocharger) away from hot exhaust pipes, and secure with zip ties. If any heat shield wrap is left over, use as needed.
76. Install the bottom half of the braided oil supply hose to the engine (pictures of bottom front of engine), per the following steps: (Be sure to use NPT thread sealant on all NPT connections)
  - A. Remove the electrical connector and the oil pressure sensor from the engine block (circled in FIGURE 63)
  - B. Using the supplied 1/8" NPT tap (P/N 30808), carefully re-tap the vacated hole in the engine block
  - C. Install the 1/8" NPT "Tee" fitting (P/N 30562) into the re-tapped hole (pointed out in FIGURE 64)
  - D. Re-install the pressure sensor into the opposite end of the "Tee" fitting
  - E. Install the 1/8" NPT x -3 straight oil fitting (P/N 30544) into the third leg of the "Tee" fitting
  - F. Install the braided oil supply line into the oil fitting from the previous step (SEE FIGURE 64).

FIGURE 63



FIGURE 64

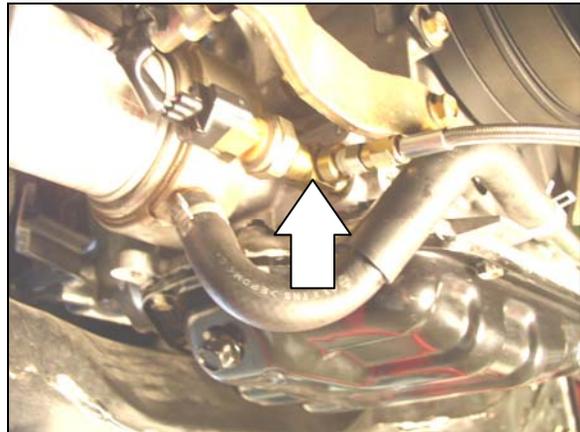


77. Install the mounting brackets (P/N 21203) to the intercooler end tanks, using (2) 1/4-20 x 1/2" hex bolts & lockwashers. Install the intercooler (P/N 5-312) assembly to the car using the factory bolts, as shown in FIGURE 65 & 66.



FIGURE 65



FIGURE 66

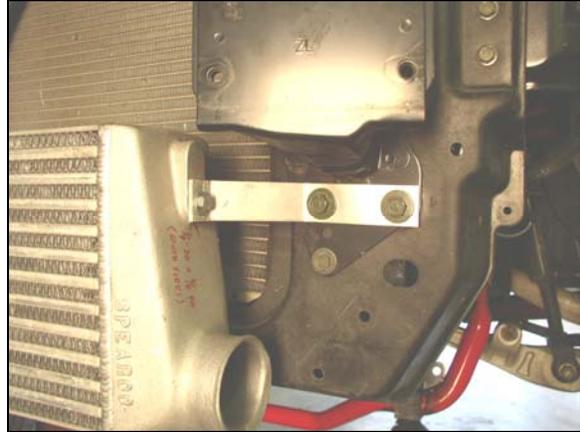

78. In the driver's side fender well, pull the factory wiring harness pointed out in FIGURE 67 away from the sheetmetal, to provide clearance for the intercooler tubing to fit under it. Install P/N 21175 (Tube Ass'y, Turbo to I/C) from the turbocharger compressor discharge to the driver's side intercooler inlet, using (1) 2-1/2" hump hose (P/N 30380-4) and (1) 2-1/2" coupling hose (P/N 30172-4) and (4) T-bolt clamps (P/N 30275-250), as seen in FIGURE 67 & 68. Use the coupling hose at the intercooler connection.

79. Install P/N 21177 (Tube Ass'y, I/C to MAFS 2) by removing the 2 factory hex bolts pointed out in FIGURE 69 & 70, and fastening the intercooler tube to the engine using these bolts. It may be convenient to install the 45-degree hose coupling (P/N 30444-4) and (2) T-bolt clamps (P/N 30275-250) to the upper end of the tube before installing it on the car.

FIGURE 67

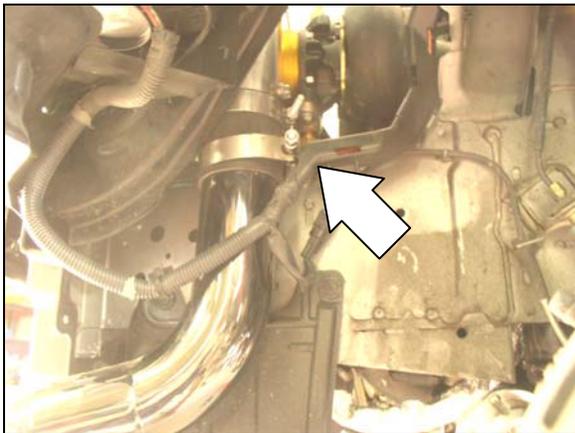


FIGURE 68





FIGURE 69


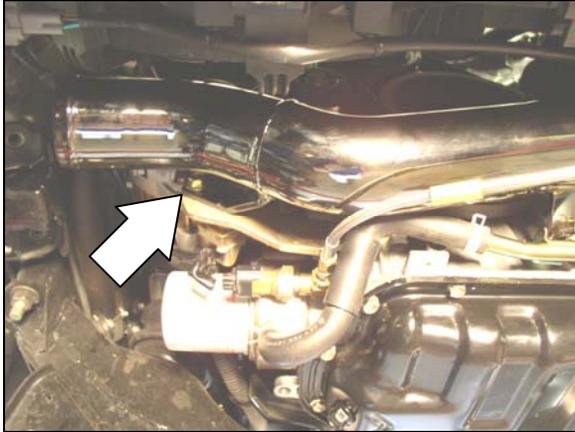


FIGURE 70

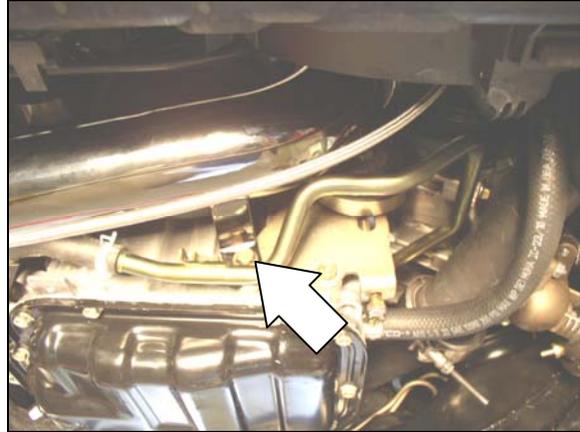

80. Install P/N 21176 (Tube Ass'y, I/C to MAFS 1) from the passenger side intercooler outlet to the tube from the previous step, using (1) 2-1/2" hump hose (P/N 30380-4) and (1) 2-1/2" coupling hose (P/N 30172-4) and (4) T-bolt clamps (P/N 30275-250), as seen in FIGURE 71. Use the coupling hose at the intercooler connection.

FIGURE 71




FIGURE 72



81. Modify P/N 30223 (turbo heat shield) as shown in FIGURE 72, using sheet metal cutters or heavy-duty scissors. Install the shield over the turbocharger turbine housing, and secure with steel wire.
82. Install P/N 31080 (K&N air filter) to the P/N 21180 (Tube Ass'y, Filter to Turbo) tube, and then install that sub-assembly to the turbocharger compressor inlet, using (1) 3.0" hose coupling (P/N 30162-4) and (2) 3.0" T-bolt clamps (P/N 30275-300). The air filter will rest on top of the intercooler, as seen in FIGURE 73.
83. Carefully route the 5/8" I.D. rubber hose (added in step# 31) along the engine bay inner fender, through the same hole that the first intercooler tube routes through, and connect to the 5/8" hose connection on the "filter to turbo" tube, re-using the factory hose clamps (pointed out in FIGURE 73). The hose can also be seen pointed out in FIGURE 77.



FIGURE 73

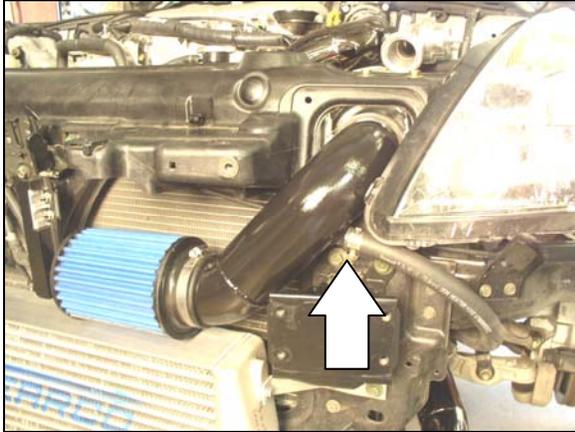

84. Install P/N 21179 (Tube Ass'y, MAFS to T/B) tube to the factory throttle body, using (1) 3.0" hose coupling (P/N 30162-4) and (2) T-bolt clamps (P/N 30275-300), as shown in FIGURE 74.
85. Pre-assemble P/N 21178 (Tube Ass'y, I/C to MAFS 3) tube with the factory mass air flow sensor (MAFS) housing, using (4) 1/4-20 x 3/4 hex bolts, flatwashers, lockwashers & nuts. Install a 3.0" hose coupling (P/N 30162-4) and (2) T-bolt clamps (P/N 30275-300) to the opposite end of the MAFS housing (SEE FIGURE 75).

FIGURE 74

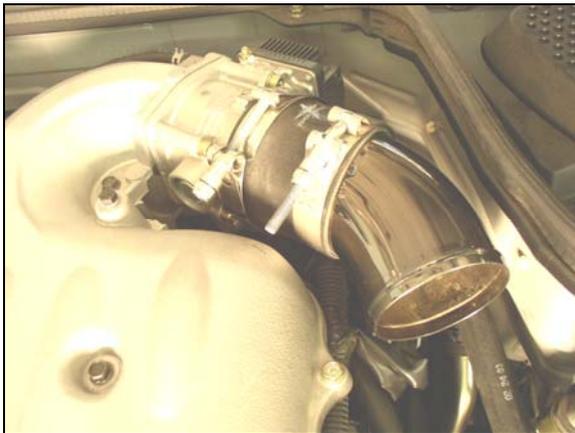


FIGURE 75



86. Loosen the factory bolt from the front side of engine, pointed out in FIGURE 76, and install the previous tube assembly using this bolt, and connecting to the 45-degree hose coupling from step# 76, and the tube in FIGURE 74. Reconnect the electrical connector to the MAFS housing (it may be necessary to cut a factory zip tie, to provide enough slack in the wire harness to reach the new MAFS housing location). Installed assembly can be seen in FIGURE 77.



FIGURE 76


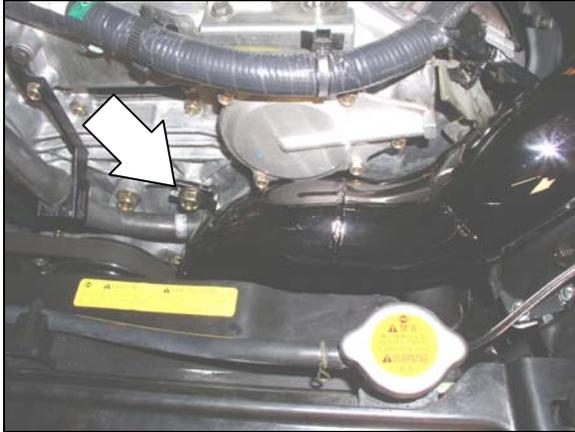


FIGURE 77

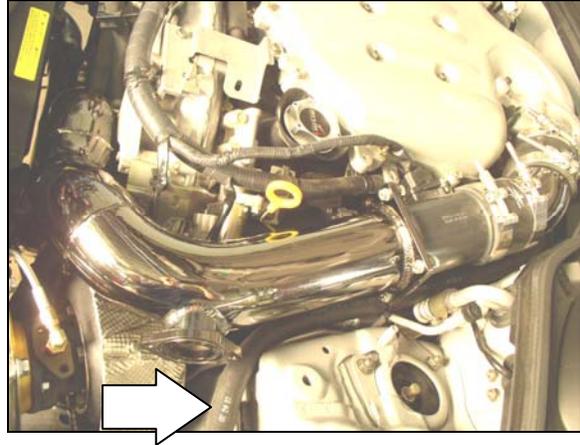

87. Install the polished discharge horn (P/N 20732P) into the discharge of the Raptor blow-off valve (P/N 10843) by simply pressing it into place. Mount the valve assembly to the swivel mount on the previous tube, using (1) O-ring (P/N 30468), and (2) 1/4-20 x 5/8" serrated head hex bolts. Orient the valve with the horn facing towards the front of the car and tighten the bolts.

FIGURE 78


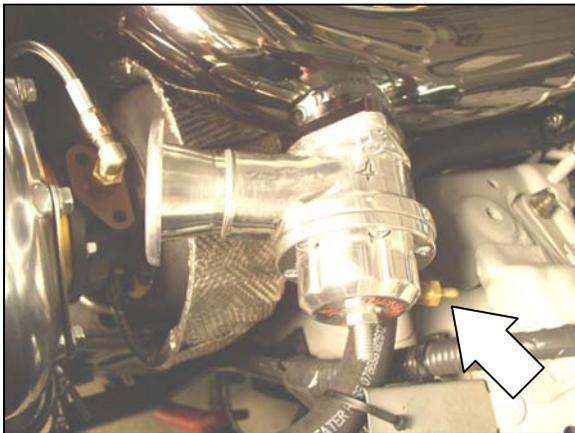


FIGURE 79



88. Install (1) 1/8" NPT x 5/32" hose fitting into the bottom port of the wastegate, and (1) 1/8" NPT x 5/32" hose fitting into the top port of the blow-off valve, pointed out in FIGURE 78.
89. Cut approx. 2.5 feet of 5/32" vacuum hose (P/N 30542-BK), and route the hose from the upper intake plenum (port shown in FIGURE 79) to the blow-off valve fitting. Cut approx. 2.5 feet of the same hose, and route it from the fitting on the wastegate to the fitting on the compressor housing (installed in step# 60). Loosely zip tie the hose as desired. **NOTE:** The operation of these turbocharger control devices rely on these hoses for pneumatic signals, so do NOT pinch or crimp the hose in any way.
90. Re-install all factory hardware that can be re-installed: ECU, sway bar, intake cover, bodywork, etc.

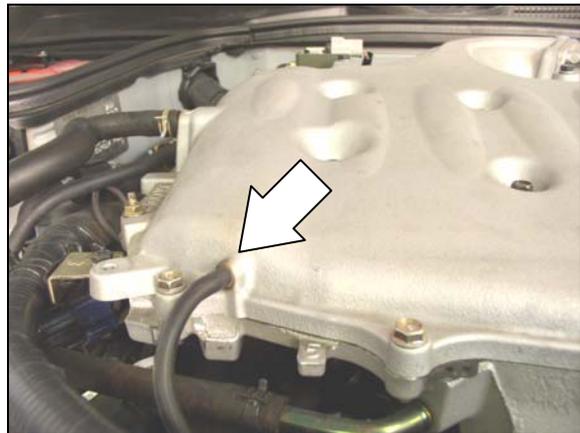

## FINAL CHECKLIST:

- Review these instructions to make sure that all fasteners, clamps & electrical connections have been installed & torqued correctly.
- Check that all hose routings are free of any kinks or near any hot or abrasive surfaces, that may cause wear over time. Adjust or reroute as necessary to provide adequate slack for engine movement.
- Refill all fluids (oil & power steering) to factory recommended levels.
- The use of synthetic oil (with the factory recommended oil weight) is strongly recommended, as it will prolong the life of the turbocharger. Regardless of factory recommended intervals, the addition of a turbocharger requires that the oil be changed every 3000 miles.
- The use of premium octane unleaded fuel is required for proper engine performance and to reduce the possibility of internal engine damage from detonation.
- Cycle the ignition to the "ON" position several times to pressurize the fuel system & check for any leaks.
- Start the vehicle and check for any oil, power steering or air pressure leaks.
- **NOTE:** It is normal for the vehicle to emit some amount of white smoke & a strange odor for an hour or two of operation, as the oils within the exhaust pipes burn off.

## TROUBLE SHOOTING GUIDE

### Car Won't Start

1. Check ECU harness to make sure its seated properly
2. Check EVAP solenoid and ensure harness is connected (located at the back of the intake plenum)
3. Check EVAP solenoid fuse (fuse is located in rear fuse panel behind battery)
4. Check fuel pump fuse (fuse is located in rear fuse panel behind battery)
5. Check for codes and troubleshoot per code

### Car goes into limp mode during acceleration

1. Verify MAF is connected and wires are intact
2. Check boost level. If over 8-9 PSI verify wastegate boost signal line is in correct port. (lower port furthest from logo) If so verify wastegate relocation pipe is installed
3. Check for boost leak at or after MAF
4. Verify throttle body is operating properly

### ECU throwing codes 1273, 1284, or any O2 related codes

1. Verify O2 sensor connectors are installed properly.
2. Verify O2 sensors are installed on proper corresponding connector
3. Verify O2 sensors are installed properly
4. Verify correct downpipe version is installed (has O2 extenders welded on)
5. Swap O2 sensor position on downpipe



### **Car not building full boost**

1. Check for boost leaks
2. Verify boost signal line is in proper position on blow off valve (upper most port closest to logo)
3. Verify wastegate boost signal line is installed properly (lower port furthest from logo)
4. Check for exhaust leaks

### **Car running excessively rich**

1. Verify stock fuel pressure regulator has been modified per instructions
2. Verify fuel pressure is correct (52-55 PSI)
3. Verify BOV signal line is installed properly (uppermost port closest to logo)
4. Check for boost leaks

### **Car misfires**

1. Verify injector harness is installed correctly
2. Verify coil pack connectors are installed correctly
3. Verify spark plugs are not fouled
4. Verify MAF sensor harness is installed correctly and wires are intact
5. Verify MAF is installed properly and is functioning
6. Verify there are no vacuum leaks post MAF

### **Car detonating under boost**

1. Check boost pressure
2. Check fuel pressure
3. Verify injectors are installed properly
4. Verify air fuel ratio on dyno

### **Air conditioning not functioning**

1. Verify replacement AC line properly installed
2. Verify AC system was properly recharged
3. Verify no AC leaks

### **Clutch pedal stays down after a track or full boost run**

1. Flush in high temp brake fluid in hydraulic clutch system
2. Replace stock clutch line with stainless steel braided line and heat wrap line

### **Car smoking when coming off boost**

1. Oil drain line not installed properly
2. Oil drain not above oil level
3. Turbo seal failed
4. Verify oil pressure (15-20 PSI at idle 35-80 on load)



**“NO FAULT / NO HASSLE” WARRANTY PROGRAM:**

TURBONETICS will repair or replace, at our expense, any new TURBONETICS / Spearco products that fail, including products used in racing or competition applications, for a period of one year from the original date of purchase. All turbocharger and cartridge assemblies have a factory installed inline oil filtration device. This filter device must remain in place if any warranty is to be considered under the No-Fault / No-Hassle program. Electrical components that fail due to misuse are not covered under the No-Fault / No-Hassle Warranty Program.

Warranty is limited to TURBONETICS products and does not include progressive or subsequential damage and does not cover removal or installation labor or associated parts. No warranty is made for any other claims for special, indirect or consequential damages including but not limited to component removal or installation equipment downtime, prospective profits or other economic loss.

Warranty will not be granted for recurring damage, malfunction, or failure due to improper installation, misuse, unauthorized repair or alterations, or externally induced physical damage.

Warranty is non-transferable and must be processed via the original purchaser from TURBONETICS.

Remanufactured units, performance upgraded units, and O.E.M. replacement units are covered by a 90-day warranty or the O.E. warranty period.

TURBONETICS highly recommends that the installation of mechanical or electrical parts be performed by trained professionals. Improperly installed products may lead to unsafe and unreliable conditions.

**RETURN POLICY:**

Only unused and complete merchandise may be accepted for return subject to inspection and acceptance by TURBONETICS. No goods will be accepted without prior return authorization from TURBONETICS. Call for approval and RGA (Returned Goods Authorization) tracking number. No returns will be accepted without an RGA tracking number. No returns will be accepted after ninety (90) days from the original shipping date from TURBONETICS unless approved. All approved returns are subject to a 15% restocking charge – NO EXCEPTIONS. The original invoice must accompany the return. Accepted warehouse / distributor and open account returns will be issued credit only.

**RETURNED GOODS AUTHORIZATION TRACKING NUMBER:**

TURBONETICS will only accept product returns, repair orders / upgrades, and warranty requests that have been approved and are returned with a corresponding RGA (Returned Goods Authorization) tracking number.

Contact TURBONETICS for approval and the RGA number. Write the RGA number clearly on the outside of the package and include it inside the package. This is very important in allowing us to properly identify and process your request. Failure to comply with this requirement will result in the delay of processing or the product being returned to you.